
ARMY FM 10-529 AIR FORCE TO 13C7-10-171

AIRDROP OF SUPPLIES
AND EQUIPMENT

RIGGING HEAVY ANTITANK ASSAULT WEAPON SYSTEM

DISTRIBUTION RESTRICTION: This publication contains technical or operational information that is for official government use only. Distribution is limited to US government agencies. Requests from outside the US government for release of this publication under the Freedom of Information Act or the Foreign Military Sales Program must be made to Commander, TRADOC, Fort Monroe, VA 23651-5000.

(TOW)

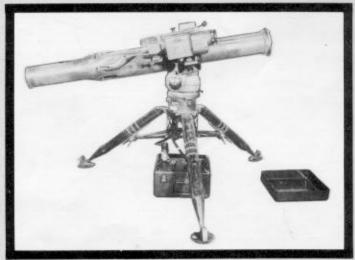

DEPARTMENTS OF THE ARMY AND THE AIR FORCE

CHANGE NO. 1 HEADQUARTERS
DEPARTMENT OF THE ARMY
DEPARTMENT OF THE AIR FORCE
Washington, DC, 17 March 1992

AIRDROP OF SUPPLIES AND EQUIPMENT: RIGGING HEAVY ANTITANK ASSAULT WEAPON SYSTEM (TOW)

This change adds the procedures for rigging M151A2, 1/4-ton trucks; M416, 1/4-ton cargo trailer; and TOW weapon system on the type V airdrop platform for low-velocity and LAPE airdrops. It also includes procedures for rigging cargo bags with missiles on a 12-foot, type V platform and rigging missiles in boxes on the type V platform. Also with this change, the distribution restriction statement must be changed as shown below. Also add a destruction notice to the cover of the basic manual as shown below.

FM 10-529/TO 13C7-10-171, 16 October 1986, is changed as follows:

- 1. New or changed material is identified by a vertical bar in the margin opposite the changed material.
- 2. Remove old pages and insert new pages as indicated below:

Remove pages	<u>Insert pages</u>
i through vii	i through xi
	9-1 through 9-31
	10-1 through 10-20
	11-1 through 11-71
	12-1 through 12-34
Glossary-1	Glossary-1
References-1	References-1

3. File this transmittal sheet in front of the publication for reference.

DISTRIBUTION RESTRICTION. Distribution authorized to US government agencies only to protect technical or operational information from automatic dissemination under the International Exchange Program or by other means. This determination was made on 30 April 1991. Other requests for this document will be referred to Commander, US Army Quartermaster Center and School, ATTN: ATSM-DTL, Fort Lee, VA 23801-5036.

DESTRUCTION NOTICE. Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

By Order of the Secretaries of the Army and Air Force:

GORDON R. SULLIVAN General, United States Army Chief of Staff

Official:

Mitto H. Azurella MILTON H. HAMILTON Administrative Assistant to the Secretary of the Army

DISTRIBUTION:

Active Army, USAR, and ARNG: To be distributed in accordance with DA Form 12-11-E, Requirements for FM 10-529, Airdrop of Supplies and Equipment: Rigging Heavy Antitank Assault Weapon System (TOW) (Qty rqr block no. 912).

FIELD MANUAL NO 10-529 TECHNICAL ORDER NO 13C7-10-171 DEPARTMENTS OF THE ARMY AND THE AIR FORCE Washington, DC, 16 October 1986

AIRDROP OF SUPPLIES AND EQUIPMENT: RIGGING HEAVY ANTITANK ASSAULT WEAPON SYSTEM (TOW)

TABLE OF CONTENTS

		Paragraph	Page
PREFACE			ix
CHAPTER 1	INTRODUCTION		
	Description of Items Special Considerations	1-1 1-2	1-1 1-1
CHAPTER 2	RIGGING M151A2, 1/4-TON TRUCKS AND TOW WEAPON SYSTEM FOR LOW-VELOCITY AIRDROP		
Section I	RIGGING M151A2, 1/4-TON TRUCK (FIRING VEHICLE) WITH MOUNTED TOW WEAPON SYSTEM		
	Description of Load	2-1	2-1
	Preparing Platform and Installing Suspension Slings	2-2	2-1
	Building and Placing Honeycomb Stacks		2-2
	Preparing Vehicle		2-4
	Positioning Vehicle	2-5	2-13
	Lashing Vehicle	2-6	2-13
	Installing Load Cover and Placing Missile Honeycomb Stack	s. 2-7	2-14
	Stowing Missiles on Platform		2-15

DISTRIBUTION RESTRICTION: Distribution authorized to US government agencies only to protect technical or operational information from automatic dissemination under the International Exchange Program or by other means. This determination was made on 30 April 1991. Other requests for this document will be refered to Commander, US Army Quartermaster Center and School, ATTN: ATSM-DTL, Fort Lee, VA 23801 5036.

DESTRUCTION NOTICE: Destroy by any method that will prevent disclosure of contents or reconstruction of the document.

^{*}This publication suspersedes FM 10-529ITO 13C7-10-171, 30 March 1981.

	I.	aragraph	Pag
	Safetying Suspension Slings	2-9	2-1
	Stowing Cargo Parachute	2-10	2-1
	Installing Extraction System	2-11	2-1
	Installing Release System	2-12	2-1
	Placing Extraction Parachute	2-13	2-1
•	Marking Rigged Load	2-14	2-1'
	Equipment Required	2-15	2-1
Section II	RIGGING M151A2, 1/4-TON TRUCK (MISSILE CARRIER) AND SIX MISSILES		
	Description of Load	2-16	2-20
	Preparing Platform and Installing Suspension Slings	2-17	2-20
	Preparing and Positioning Honeycomb	2-18	2-2
	Preparing Carrier and Stowing Missiles	2-19	2-22
	Installing Load Cover	2-13	2-24
	Positioning Truck	2-20	2-2
	Installing Lashings	2-21	2-2-
	Stowing Cargo Parachutes	2-22	2-2
	Installing Extraction System	2-23 2-24	2-2
	Installing Release System	4-4 4	
	Positioning Extraction Parachute	2-25	2-25
	Marking Rigged Load	2-26	2-25
	Equipment Required	2-27 2-28	2-25 2-25
CHAPTER 3	RIGGING M151A2, 1/4-TON UTILITY TRUCKS AND TOW WEAPON SYSTEM FOR LAPE AIRDROP		
	Description of Load	3-1	3-1
	Preparing Platform	3-2	3-1
	Building and Placing Honeycomb Stacks	3-3	3-2
	Preparing Firing Vehicle	3-4	3-3
	Preparing Missile Carrier	3-5	3-9
	Positioning Trucks	3-6	3-13
	Installing Lashings	3-7	3-13
	Installing Attitude Control Bar	3-8	3-17
	Installing Extraction System	3-9	3-18
	Positioning Extraction Parachutes	3-10	3-19
	Marking Rigged Load	3-11	3-19
	Equipment Required	3-12	3-19
CHAPTER 4	RIGGING M274A5, 1/2-TON PLATFORM TRUCKS WITH TOW WEAPON SYSTEM FOR LOW-VELOCITY AIR		
	Description of Load	4-1	4-1
	Preparing Platform	4-1	4-1 4-2
	Placing Honeycomb Stacks	4-2	4-2
	Preparing Trucks	4-3 4-4	4-3 4-4
	Stowing Accompanying Load	4-4 4-5	
	Positioning Trucks	4-0 1 G	4-12 4-13
		41-D	4-IJ

		Paragraph	Page
	Installing Lashings	. 4-7	4-13
	Installing Load Cover		4-14
	Safetying Suspension Slings		4-14
	Stowing Cargo Parachutes		4-15
	Installing Extraction System		4-15
	Installing Release System		4-15
	Positioning Extraction Parachute		4-15
	Marking Rigged Load		4-15
	Equipment Required		4-15
CHAPTER 5	RIGGING TOW WEAPON SYSTEM AND MISSILES IN AN A-22 CARGO BAG FOR LOW-VELOCITY AIRDROP		
	THE THE CHILD BEG TO THE BOW VIDEOUT I THE BEG T		
	Description of Load	. 5-1	5-1
	Rigging A-22 Cargo Bag	. 5-2	5-1
	Attaching Cargo Parachutes		5-8
	Equipment Required		5-8
CHAPTER 6	RIGGING TOW MISSILES		
Section I	RIGGING M151A2, 1/4-TON TRUCK AND M416, 1/4-TON CA	RGO TRAI	LER
	WITH MISSILES FOR LOW-VELOCITY AIRDROP		
	Description of Load	. 6-1	6-1
	Preparing Platform and Installing Suspension Slings		6-1
	Constructing, Positioning, and Lashing Strongbacks		6-3
	Preparing and Positioning Honeycomb		6-4
	Stowing Accompanying Load		6-7
	Preparing Load		6-8
	Positioning Load		6-14
	Lashing Load		6-14
	Installing Load Cover		6-16
	Installing Antitumble Slings and Safetying Suspension Slings	6-10	6-16
	Stowing Cargo Parachutes		6-18
	Installing Extraction System		6-20
	Installing Release System		6-22
	Positioning Extraction Parachute		6-23
	Marking Rigged Load		6-23
	Equipment Required	. 6-16	6-23
C4: II	RIGGING M151A2, 1/4-TON TRUCK AND M416, 1/4-TON CA		0 20
Section II	TRAILER WITH MISSILES FOR LAPE AIRDROP	ingo	
	Description of Load	. 6-17	6-26
	Preparing Platform and Installing Bridle Plates	. 6-18	6-26
	Stowing Accompanying Load		6-27
•	Preparing and Positioning Honeycomb		6-29
	Preparing Load		6-32
	Positioning Load		6-36
	Lashing Load		6-37
	Installing Attitude Control Bar		6-39
	Installing Extraction System		6-40
	under the second of the second		

		Paragraph	Page
	Positioning Extraction Parachutes	. 6-26	6-40
	Marking Rigged Load		6-40
	Equipment Required		6-40
Section III	RIGGING HEAVY ANTITANK ASSAULT WEAPON MISSIL		
	M416, 1/4-TON CARGO TRAILER FOR LOW-VELOCITY AIF		
	Description of Load	. 6-29	6-43
	Preparing Platform and Installing Suspension Slings		6-43
	Stowing Accompanying Load		6-44
	Preparing and Positioning Honeycomb		6-45
	Preparing Trailer		6-46
	Positioning Load		6-46
	Lashing Trailer and Missile		6-46
	Safetying Suspension Slings		6-47
	Stowing Cargo Parachute		6-48
	Installing Extraction System		6-48
	Installing Release System		6-49
	Positioning Extraction Parachute		6-50
	Marking Rigged Load		6-50
	Equipment Required	. 6-42	6-50
Section IV	RIGGING 12 TOW MISSILES IN AN A-22 CARGO BAG FOR LOW-VELOCITY AIRDROP		
	Description of Load	6-43	6-53
	Rigging A-22 Cargo Bag		6-53
	Attaching Cargo Parachutes		6-54
	Equipment Required		6-55
Section V	RIGGING FOUR A-22 CARGO BAGS ON A 12-FOOT PLATFORM FOR LOW-VELOCITY AIRDROP		
	Description of Load	6.47	6-56
	Preparing Platform		6-56
	Preparing and Positioning Honeycomb		6-57
	Preparing Load		6-59
	Positioning Load		6-59
	Lashing Load		6-59
	Installing Suspension Slings		6-61
	Stowing Cargo Parachutes		6-62
	Installing Extraction System		6-63
	Installing Release System		6-64
	Positioning Extraction Parachute		6-65
	Marking Rigged Load		6-65
	Equipment Required		6-66
Section VI	RIGGING FOUR A-22 CARGO BAGS ON A 12-FOOT PLATFO FOR LAPE AIRDROP	ORM	
	Description of Load	. 6-60	6-68
	Preparing Platform		6-68
	Preparing and Positioning Honeycomb		6-69
	Preparing Load		6-69
	Positioning and Lashing Load		6-70

		Paragraph	Page
	Installing Attitude Control Bar	6-65	6-75
	Installing Extraction System		6-77
	Positioning Extraction Parachutes		6-77
	Marking Rigged Load	6-68	6-77
	Equipment Required	6-69	6-77
CHAPTER 7	RIGGING MISSILES IN OVERPACKS		
Section I	RIGGING MISSILES IN OVERPACKS FOR LOW-VELOCITY	AIRDROP	
	Description of Load		7-1
	Preparing Platform and Installing Suspension Slings		7-1
	Preparing and Positioning Honeycomb		7-4
	Positioning and Lashing Load		7-4
	Safetying Suspension Slings	. 7-5	7-8
	Installing Cargo Parachutes, Extraction System, Release Syste	m,	
	and Extraction Parachute	. 7-6	7-9
	Marking Rigged Load	. 7-7	7-9
	Equipment Required		7-9
Section II	RIGGING MISSILES IN OVERPACKS FOR LAPE AIRDROP		
	Description of Load		7-12
	Preparing Platform	. 7-10	7-12
	Preparing and Positioning Honeycomb	. 7-11	7-12
	Positioning and Lashing Load	. 7-12	7-12
	Installing Attitude Control Bar		7-18
	Installing Extraction System		7-18
	Positioning Extraction Parachute		7-18
	Marking Rigged Load		7-18
	Equipment Required		7-18
CHAPTER 8	RIGGING 12 MISSILE OVERPACKS IN AN A-22 CARGO CONTAINER FOR HIGH-VELOCITY AIRDROP)	
	Description of Load	. 8-1	8-1
	Rigging A-22 Cargo Bag	. 8-2	8-1
	Installing Parachute	. 8-3	8-4
	Equipment Required		8-5
CHAPTER 9	RIGGING M151A2, 1/4-TON TRUCKS AND TOW WEAPO THE TYPE V AIRDROP PLATFORM FOR LOW-VELOC	ON SYSTE CITY AIRE	M ON OROP
Section I	RIGGING M151A2, 1/4- TON TRUCK (FIRING VEHICLE) WITH MOUNTED TOW WEAPON SYSTEM		
	Description of Load	9-1	9-1
	Preparing Platform		9-1
	Building and Placing Honeycomb Stacks		9-2
	Preparing Firing Vehicle and TOW Missile Firing Equipment		9-4
	Positioning Firing Vehicle		9-11
	Lashing Firing Vehicle		9-11

1	Installing Load Cover and Placing Honeycomb Stacks	Paragraph	Page
	for Missiles	. 9-7	9-12
	Stowing and Lashing Missiles on Platform		9-12 9-13
	Attaching Suspension Slings and Deadman's Tie		9-14
	Stowing Cargo Parachutes and Installing Extraction System	. 9-10	9-14 9-15
	Installing Release System	. 9-10	9-16
	Placing Extraction Parachute	. 9-12	9-16
	Installing Emergency Restraints	. 9-13	9-16
	Marking Rigged Load	. 9-14	9-16
	Equipment Required	. 9-14	9-16
Section II	RIGGING M151A2, 1/4-TON TRUCK (MISSILE CARRIER) AND SIX MISSILES	. 0 10	0.10
	Description of Load	9-16	9-20
	Preparing Platform		9-20
	Building and Placing Honeycomb Stacks	. 9-18	9-21
	Preparing Missile Carrier and Stowing Missiles	. 9-19	9-22
	Positioning Missile Carrier		9-25
	Lashing Missile Carrier	. 9-21	9-25
	Installing Load Cover	. 9-22	9-26
	Attaching Suspension Slings and Deadman's Tie		9-26
	Stowing Cargo Parachutes and Installing Extraction System		9-27
,	Installing Release System		9-28
	Placing Extraction Parachute	9-26	9-29
	Installing Emergency Restraints	. 9-27	9-29
	Marking Rigged Load	. 9-28	9-29
	Equipment Required		9-30
CHAPTER 10	RIGGING M151A2, 1/4-TON TRUCKS (MISSILE CARRIE VEHICLE) AND TOW WEAPON SYSTEM ON THE TYPE PLATFORM FOR LAPE AIRDROP		
	Description of Load	. 10-1	10-1
	Preparing Platform		10-1
	Building and Placing Honeycomb Stacks		10-2
	Preparing Firing Vehicle and TOW Missile Firing Equipment		10-4
	Preparing Missile Carrier	. 10-5	10-10
	Positioning Trucks	. 10-6	10-14
	Lashing Trucks		10-14
	Installing Attitude Control Bar		10-17
	Installing Extraction System	. 10-9	10-18
	Placing Extraction Parachutes	. 10-10	10-18
	Marking Rigged Load	. 10-11	10-18
4	Equipment Required	. 10-12	10-18
CHAPTER 11	RIGGING TOW MISSILES ON THE TYPE V AIRDROP	PLATFOR	M
Section I	RIGGING M151A2, 1/4-TON TRUCK (MISSILE CARRIER) AT CARGO TRAILER WITH MISSILES FOR LOW-VELOCITY A	ND M416, 1 IRDROP	/4-TON
	Description of Load	. 11-1	11-1

Preparing Platform		Pa	ragraph	Page
Building and Placing Honeycomb Stacks		Proparing Platform	11-2	
Stowing Accompany Load		Puilding and Placing Honeycomh Stacks	11-3	
Lashing Accompanying Load		Staving Accompany Load	11-4	
Preparing Load		Laching Accompanying Load	11-5	
Positioning Load		Descring Lord	11-6	11-7
Lashing Load Cover 11-9 11-11		Preitiening Load	11-7	11-9
Installing and Safetying Antitumble Slings and Suspension Slings Stowing Cargo Parachutes 11-11 11-13 11-14 11-15 11-16 11-17 11-16 11-17 11-16 11-18 11-17 11-18 11-17 11-18 11-17 11-18 11-15 11-18 11-15 11-18 11-15 11-18 11-16 11-18 11-17 11-19 11-12 11-1		Positioning Load	11-8	11-9
Installing and Safetying Antitumble Slings and Suspension Slings Stowing Cargo Parachutes Installing Extraction System Installing Extraction System Installing Extraction System Installing Extraction System Installing Extraction Parachute Installing Extraction Parachute Installing Emergency Restraints Intelling Emergency Restraints		Lashing Load		11-11
Suspension Slings		Installing Load Cover		
Suspension Bills		Installing and Saletying Anticumble Simps and	11-10	11-11
Installing Extraction System 11-12 11-16		Suspension Stings		11-13
Installing Release System		Stowing Cargo Parachutes		11-16
Placing Extraction Parachute		Installing Extraction System		11-17
Placing Extraction Parachute Installing Emergency Restraints I1-15 I1-18 Installing Emergency Restraints I1-16 I1-18 I1-16 I1-18 Equipment Required I1-17 I1-19 I1-1		Installing Release System		
Installing Emergency Restraints		Placing Extraction Parachute		
Section II RIGGING M151A2, 1/4-TON TRUCK (MISSILE CARRIER) AND M416, 1/4-TON CARGO TRAILER WITH MISSILES FOR LAPE AIRDROP		Installing Emergency Restraints		
RIGGING M151A2, 1/4-TON TRUCK (MISSILE CARRIER) AND M416, 1/4-TON CARGO TRAILER WITH MISSILES FOR LAPE AIRDROP Description of Load 11-18 11-21 11-21 11-22 11-25 11-22 11-24 11-24 11-24 11-25 11-24 11-24 11-25 11-24 11-24 11-25 11-24 11-24 11-25 11-24 11-24 11-25 11-24 11-24 11-25 11-24 11-25 11-25 11-27 11-24 11-25 11-25 11-27 11-24 11-26 11-24 11-26 11-24 11-26 11-24 11-26 11-24 11-26 11-24 11-26 11-24 11-26 11-24 11-26 11-24 11-26 11-26 11-26 11-27 11-26 11-27 11-26 11-27 11-28		Marking Rigged Load	_	
Description of Load		Equipment Required		
Description of Load	Section II	RIGGING M151A2, 1/4-TON TRUCK (MISSILE CARRIER) AN	D MAIRDR∩	P
Description of Load		M416, 1/4-TON CARGO TRAILER WITH MISSILES FOR LAFE	11 10	11.91
Stowing Accompanying Load 11-20 11-22		Description of Load		
Stowing Accompanying Load		Preparing Platform	11-19	
Lashing Accompanying Load 11-21 11-25 11-25 11-26 Preparing Load 11-23 11-29 Preparing Load 11-24 11-36 11-25 11-37 11-25 11-37 11-25 11-37 11-25 11-37 11-26 11-39 11-26 11-39 11-26 11-39 11-26 11-39 11-26 11-39 11-27 11-40 11-28 11-41 11-28 11-41 11-28 11-41 11-29 11-41 11-41 11-51 11-42 11-43 11-44 11-51 11-44 11-53 11-44 11-53 11-45		Stowing Accompanying Load	11-20	
Building and Placing Honeycomb Stacks 11-23 11-29 Preparing Load 11-24 11-36 Positioning Load 11-25 11-37 Lashing Load 11-25 11-37 Installing Attitude Control Bar 11-26 11-39 Installing Extraction System 11-27 11-40 Placing Extraction Parachutes 11-28 11-41 Marking Rigged Load 11-29 11-41 Equipment Required 11-30 11-41 Equipment Required 11-30 11-41 Section III RIGGING M416, 1/4-TON CARGO TRAILER WITH MISSILES FOR LOW-VELOCITY AIRDROP Description of Load 11-32 11-44 Preparing Platform 11-33 11-45 Stowing Accompanying Load 11-34 11-45 Building Honeycomb Stacks for Trailer 11-35 11-48 Preparing Trailer With Missiles 11-36 11-48 Preparing Trailer With Missiles 11-36 11-48 Positioning Load 11-37 11-49 Lashing Load 11-38 11-49 Lashing Load 11-38 11-49 Lashing Suspension Slings 11-30 Installing Release System 11-41 11-51 Installing Release System 11-41 11-51 Installing Extraction Parachute 11-43 11-53 Installing Extraction Parachute 11-43 11-53 Installing Emergency Restraints 11-44 Installing Emergenc		Loching Accompanying Load	11-21	_
Preparing Load		Ruilding and Placing Honeycomb Stacks	11-24	
Positioning Load		Proparing Load	11-20	
Lashing Load		Positioning Load	11-24	
Installing Attitude Control Bar		Lashing Load	11-20	
Installing Extraction System 11-24 11-28 11-41 11-28 11-41 11-29 11-41 11-51 11-29 11-41 11-53 11-41 11-53 11-41 11-53 11-41 11-53 11-41 11-53 11-41 11-53 11-42 11-53 11-44 11-54 11-54		Installing Attitude Control Bar	11-20	
Placing Extraction Parachutes 11-29 11-41 Marking Rigged Load 11-29 11-41 Equipment Required 11-30 11-41 Section III RIGGING M416, 1/4-TON CARGO TRAILER WITH MISSILES FOR LOW-VELOCITY AIRDROP Description of Load 11-31 11-44 Preparing Platform 11-32 11-44 Preparing Trailer 11-33 11-45 Stowing Accompanying Load 11-34 11-45 Building Honeycomb Stacks for Trailer 11-35 11-48 Preparing Trailer With Missiles 11-36 11-48 Preparing Trailer With Missiles 11-37 11-49 Lashing Load 11-38 11-49 Lashing Load 11-38 11-49 Installing Suspension Slings 11-39 11-50 Stowing Cargo Parachutes 11-40 11-51 Installing Release System 11-41 11-51 Installing Extraction System 11-42 11-52 Placing Extraction Parachute 11-43 11-53 Installing Emergency Restraints 11-44 Installing Emergency Restraints 11-45 Installing Emergency Restraints 11-45 Installing Emerge		Installing Extraction System	11-24	
Marking Rigged Load		Placing Extraction Parachutes	11-20	
Equipment Required 11-30 11-41		Marking Rigged Load	. 11-29	
RIGGING M416, 1/4-TON CARGO TRAILER WITH MISSILES FOR LOW-VELOCITY AIRDROP		Equipment Required	. 11-30	11-41
FOR LOW-VELOCITY AIRDROP 11-31 11-44 Description of Load 11-32 11-44 Preparing Platform 11-33 11-45 Preparing Trailer 11-34 11-45 Stowing Accompanying Load 11-35 11-48 Building Honeycomb Stacks for Trailer 11-35 11-48 Preparing Trailer With Missiles 11-36 11-48 Positioning Load 11-37 11-49 Lashing Load 11-38 11-49 Installing Suspension Slings 11-39 11-50 Stowing Cargo Parachutes 11-40 11-51 Installing Release System 11-41 11-51 Installing Extraction System 11-42 11-52 Placing Extraction Parachute 11-43 11-53 Installing Emergency Restraints 11-44 11-53	Section III	RIGGING M416, 1/4-TON CARGO TRAILER WITH MISSILES	5	
Description of Load 11-32 11-44 Preparing Platform 11-33 11-45 Preparing Trailer 11-34 11-45 Stowing Accompanying Load 11-35 11-48 Building Honeycomb Stacks for Trailer 11-35 11-48 Preparing Trailer With Missiles 11-36 11-48 Positioning Load 11-37 11-49 Lashing Load 11-38 11-49 Installing Suspension Slings 11-39 11-50 Stowing Cargo Parachutes 11-40 11-51 Installing Release System 11-41 11-51 Installing Extraction System 11-42 11-52 Placing Extraction Parachute 11-43 11-53 Installing Emergency Restraints 11-44 11-53	2000.01.	FOR LOW-VELOCITY AIRDROP		
Preparing Platform 11-32 11-45 Preparing Trailer 11-33 11-45 Stowing Accompanying Load 11-34 11-45 Building Honeycomb Stacks for Trailer 11-35 11-48 Preparing Trailer With Missiles 11-36 11-48 Positioning Load 11-37 11-49 Lashing Load 11-38 11-49 Installing Suspension Slings 11-39 11-50 Stowing Cargo Parachutes 11-40 11-51 Installing Release System 11-41 11-51 Installing Extraction System 11-42 11-52 Placing Extraction Parachute 11-43 11-53 Installing Emergency Restraints 11-44 11-53		Description of Load	11-31	
Preparing Trailer 11-35 11-45 Stowing Accompanying Load 11-34 11-45 Building Honeycomb Stacks for Trailer 11-35 11-48 Preparing Trailer With Missiles 11-36 11-48 Positioning Load 11-37 11-49 Lashing Load 11-38 11-49 Installing Suspension Slings 11-39 11-50 Stowing Cargo Parachutes 11-40 11-51 Installing Release System 11-41 11-51 Installing Extraction System 11-42 11-52 Placing Extraction Parachute 11-43 11-53 Installing Emergency Restraints 11-44 11-53		Preparing Platform	. 11-02	
Stowing Accompanying Load 11-34 11-48 Building Honeycomb Stacks for Trailer 11-35 11-48 Preparing Trailer With Missiles 11-36 11-48 Positioning Load 11-37 11-49 Lashing Load 11-38 11-49 Installing Suspension Slings 11-39 11-50 Stowing Cargo Parachutes 11-40 11-51 Installing Release System 11-41 11-51 Installing Extraction System 11-42 11-52 Placing Extraction Parachute 11-43 11-53 Installing Emergency Restraints 11-44 11-53		Prenaring Trailer	. 11-33	
Building Honeycomb Stacks for Trailer 11-35 11-48 Preparing Trailer With Missiles 11-36 11-48 Positioning Load 11-37 11-49 Lashing Load 11-38 11-49 Installing Suspension Slings 11-39 11-50 Stowing Cargo Parachutes 11-40 11-51 Installing Release System 11-41 11-51 Installing Extraction System 11-42 11-52 Placing Extraction Parachute 11-43 11-53 Installing Emergency Restraints 11-44 11-53		Stowing Accompanying Load	. 11-34	
Preparing Trailer With Missiles 11-36 11-48 Positioning Load 11-37 11-49 Lashing Load 11-38 11-49 Installing Suspension Slings 11-39 11-50 Stowing Cargo Parachutes 11-40 11-51 Installing Release System 11-41 11-51 Installing Extraction System 11-42 11-52 Placing Extraction Parachute 11-43 11-53 Installing Emergency Restraints 11-44 11-53		Building Honeycomb Stacks for Trailer	, 11-35	
Positioning Load 11-37 11-49 Lashing Load 11-38 11-49 Installing Suspension Slings 11-39 11-50 Stowing Cargo Parachutes 11-40 11-51 Installing Release System 11-41 11-51 Installing Extraction System 11-42 11-52 Placing Extraction Parachute 11-43 11-53 Installing Emergency Restraints 11-44 11-53		Preparing Trailer With Missiles	. 11-30	
Lashing Load 11-38 11-49 Installing Suspension Slings 11-39 11-50 Stowing Cargo Parachutes 11-40 11-51 Installing Release System 11-41 11-51 Installing Extraction System 11-42 11-52 Placing Extraction Parachute 11-43 11-53 Installing Emergency Restraints 11-44 11-53	:	Positioning Load	. 11-51	
Installing Suspension Slings 11-39 11-50 Stowing Cargo Parachutes 11-40 11-51 Installing Release System 11-41 11-51 Installing Extraction System 11-42 11-52 Placing Extraction Parachute 11-43 11-53 Installing Emergency Restraints 11-44 11-53		Lashing Load	. 11-30	
Stowing Cargo Parachutes 11-40 11-51 Installing Release System 11-41 11-51 Installing Extraction System 11-42 11-52 Placing Extraction Parachute 11-43 11-53 Installing Emergency Restraints 11-44 11-53		Installing Suspension Slings	. 11-39	
Installing Release System 11-41 11-51 Installing Extraction System 11-42 11-52 Installing Extraction Parachute 11-43 11-53 Installing Emergency Restraints 11-44 11-53		Stowing Cargo Parachutes	. 11-40	
Installing Extraction System		Installing Release System	. 11-41	
Placing Extraction Parachute		Installing Extraction System	. 11-44	
Installing Emergency Restraints 11-44 11-05		Placing Extraction Parachute	11-43	
Marking Rigged Load		Installing Emergency Restraints	11-44	
		Marking Rigged Load	11-45	11-53

		Paragraph	Page
	Equipment Required		11-53
Section IV	RIGGING FOUR A-22 CARGO BAGS WITH MISSILES ON A PLATFORM FOR LOW-VELOCITY AIRDROP	12-FOOT	
	Description of Load	. 11-47	11-56
	Preparing Platform	. 11-48	11-56
•	Building and Placing Honeycomb Stacks	. 11-49	11-57
	Preparing Load	. 11-50	11-59
	Positioning Load	. 11-51	11-62
	Lashing Load	11-52	11-63
	Installing Suspension Slings	. 11-53	11-65
	Stowing Cargo Parachutes	. 11-54	11-66
	Installing Release System	. 11-55	11-68
	Installing Extraction System	. 11-56	11-69
	Placing Extraction Parachute	. 11-57	11-69
	Installing Emergency Restraints	. 11-58	11-69
	Marking Rigged Load	. 11-59	11-69
	Equipment Required	. 11-60	11-69
CHAPTER 12	RIGGING TOW MISSILES IN BOXES ON THE TYPE V A	AIRDROP	
Section I	RIGGING MISSILES FOR LOW-VELOCITY AIRDROP		
	Description of Load	. 12-1	12-1
	Preparing Platform		12-1
	Building and Placing Honeycomb Stacks	. 12-3	12-3
	Preparing Load		12-5
	Lashing Load		12-10
	Attaching and Safetying Suspension Slings	. 12-6	12-14
	Installing Cargo Parachutes	. 12-7	12-15
	Installing Release System	. 12-8	12-16
	Installing Extraction System	. 12-9	12-17
	Placing Extraction Parachute	. 12-10	12-18
	Installing Emergency Restraints	. 12-11	12-18
	Marking Rigged Load	. 12-12	12-18
	Equipment Required	. 12-13	12-18
Section II	RIGGING MISSILES FOR LAPE AIRDROP		_
	Description of Load	. 12-14	12-21
	Preparing Platform	. 12-15	12-21
	Building and Placing Honeycomb Stacks	. 12-16	12-22
	Preparing and Lashing Load	. 12-17	12-23
	Installing Attitude Control Bar	. 12-18	12-30
×	Installing Extraction System	. 12-19	12-32
	Placing Extraction Parachutes	. 12-20	12-33
	Marking Rigged Load	. 12-21	12-33
	Equipment Required	. 12-22	12-33
GLOSSARY			. • •
REFERENCES			
CHOMENTE TELE	•••••	REFEREN	10E2-1

PREFACE

SCOPE

This manual tells and shows how to rig the heavy antitank assault weapon system (hereafter called the TOW weapon system) for LV and LAPE system airdrops from C-130 and C-141 aircraft on the type II modular platform, LAPE platform, and type V platform. The TOW weapon system consists of the launcher with tracking and control units and the TOW missile encased in a launching tube. This manual is designed for use by all parachute riggers.

The TOW weapon system and its components may be airdropped in the following ways:

- An M151A2, 1/4-ton truck with the mounted TOW weapon system and two missiles are rigged on a 12-foot platform for LV airdrop.
- An M151A2, 1/4-ton truck with the mounted TOW weapon system and a second M151A2 loaded with six missiles are rigged for LAPE airdrop.
- Two M274A5, 1/2-ton trucks are rigged together on an 8-foot platform. One truck carries the mounted TOW weapon system. The second truck also carries a TOW weapon system or a load of supplies.
- The TOW weapon system is rigged in an A-22 cargo container with eight missiles.
 Missiles for the TOW weapon system may also be airdropped separately.
- Six missiles are rigged in an M151A2, 1/4-ton truck on a 12-foot platform for LV airdrop.
- Thirteen missiles are rigged in an M151A2, 1/4-ton truck and an M416, 1/4-ton cargo trailer on a 16-foot platform for LV airdrop.
- Thirteen missiles are rigged in an M151A2, 1/4-ton truck and an M416, 1/4-ton trailer for LAPE airdrop. An additional nine missiles or other accompanying load may be rigged on this platform.
- Eight missiles are rigged with an M416, 1/4-ton cargo trailer on an 8-foot platform for LV airdrop.
- Twelve missiles are rigged in an A-22 cargo bag for LV airdrop.
- Forty-eight missiles are rigged in four A-22 cargo bags on a 12-foot platform for LV airdrop.
- Forty-eight missiles are rigged in four A-22 cargo bags on a 12-foot platform for LAPE airdrop.
- Forty-eight missiles are rigged on a 12-foot platform for LV airdrop.
- Forty-eight missiles are rigged on a 12-foot platform for LAPE airdrop.
- Twelve missiles are rigged in an A-22 cargo bag for high-velocity airdrop.

USER INFORMATION

The proponent of this publication is HQ TRADOC. You are encouraged to report any errors or omissions and suggest ways for making this a better manual. Army personnel,

send your comments on DA Form 2028 directly to:

Commander
US Army Quartermaster Center and School
ATTN: ATSM-DTL
Fort Lee, Virginia 23801-5036

Air Force personnel, send your reports on AFTO Form 22. Send the reports through:

Headquarters
Military Airlift Command
(MAC/XOTTX)
Scott AFB, Illinois 62225-5001

to:

Commander
US Army Quartermaster Center and School
ATTN: ATSM-DTL
Fort Lee, Virginia 23801-5036

Also send information copies of AFTO Form 22 to:

San Antonio ALC/LDILT Kelly AFB, Texas 78241-5000

CHAPTER 1

INTRODUCTION

1-1. Description of Items

The description of the items covered in this manual is as follows:

- a. When mounted on the unrigged M151A2, 1/4-ton utility truck (firing vehicle), the weight of the TOW weapon system with two missiles in overpacks is 2,838 pounds (reducible to 2,660 pounds without missiles). It is 133 inches long and 64 inches wide. The height of the truck is 72 inches (reducible to 57 inches).
- **b.** The M151A2, 1/4-ton utility truck (missile carrier) with six encased missiles may be used as the resupply load for the TOW weapon system. The unrigged truck with the six encased missiles weighs 2,830 pounds. It is 133 inches long and 64 inches wide. The height of the truck is 72 inches (reducible to 53 inches).
- c. When mounted on the unrigged M274A5, 1/2-ton platform truck (mule), the TOW weapon system with six encased missiles weighs 1,541 pounds. Its length is 118 inches (reducible to 101 inches), and it is 49 inches wide. The height of the truck is 66 inches (reducible to 48 inches).
- **d.** The M416, 1/4-ton trailer with seven encased missiles weighs 1,170 pounds. It measures 109 inches long, 61 inches wide, and 44 inches high.

- e. Forty-eight TOW missiles in overpacks are rigged for low-velocity airdrop.
- f. Forty-eight TOW missiles in overpacks are rigged for LAPE airdrop.
- g. Twelve TOW missiles in overpacks are rigged in an A-22 cargo bag.

Note: EACH MISSILE IN ITS OVERPACK WEIGHS 87 POUNDS. ITS LENGTH IS 57 1/2 INCHES, ITS WIDTH IS 12 INCHES, AND ITS HEIGHT IS 12 INCHES.

1-2. Special Considerations

Special considerations are given below.

- *a.* These loads contain dangerous materials, explosives and gasoline, as defined in AFR 71-4/TM 38-250. The materials must be packaged, marked, and labeled according to AFR 71-4/TM 38-250.
- **b.** A copy of this manual must be available to the joint airdrop inspectors during the before- and after-loading inspections.